




Handrails with aluminium core


Assembly Instruction

2020

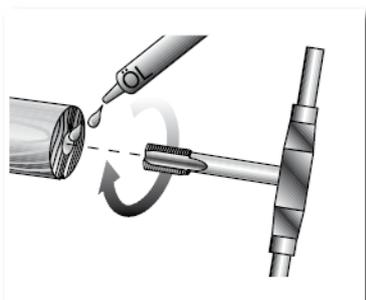

Cutting the handrails to length


(Right-angled, clean cut with a fine-toothed mitre saw.)
Cut the inside thread on both handrail ends with a screw tap (be sure to use cutting oil!)

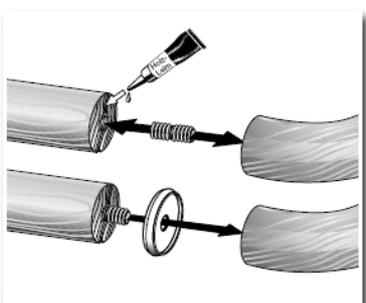

Assembly with arches

Screw the connecting screws into the inside thread. Coat the cut surfaces with wood glue, tighten the arch and align. Sand and repaint the resulting crossover. Alternatively, a length connector can be used to cover the cut edges.

Use the plastic connecting screws to connect wooden parts; brass connecting screws are more suitable for connections with straight connectors.

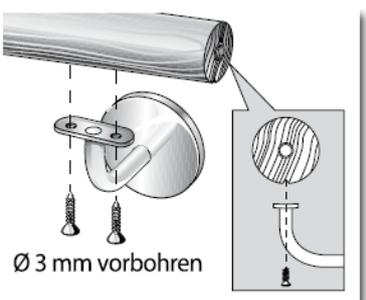

Screw the handrail support with the support in the **groove** of the handrail. (Countersunk screw 3.5x25 mm)



Cover caps made of wood:

Coat surface with wood glue and press firmly.



We are certified.
Certified products
available on demand
(PEFC™ oder FSC™)

WE SUPPLY WOOD PERFECTION IN SERIES.

Franz Kolar Ges.m.b.H.

Josef-Strebl-Gasse 8 | 2345 Brunn/Gebirge | AUSTRIA
T. +43 2236 317 24 | office@kolar.at | www.fkolar.com